



**PROCESSALL**

# Agglomeration/ Wet Granulation




**The process of combining smaller particles into larger sized agglomerates**

**The agglomeration process usually produces an open, more porous particle structure and is often desirable for these reasons:**

- The larger and more uniform particle size distribution improves the flow and handling properties of the product for better tableting, briquetting, package filling, extrusion, or powder compression
- Agglomeration increases product dispersion and solubility.
- Granulation often changes the bulk density.
- Product "dusting" can be controlled by agglomeration.

The correct moisture level, an appropriate binding agent, or solubilizing agent to control surface tension can all be used to affect particle size and density. Conventional spray and fluid-bed granulation techniques require heavy capital investment, involve elaborate and time-consuming clean-up, do not readily handle materials with different bulk or particle densities, require a large amount of floor space, and often need the expense of post-granulation drying equipment.

**Typical Agglomeration/  
Wet Granulation Sequence:**

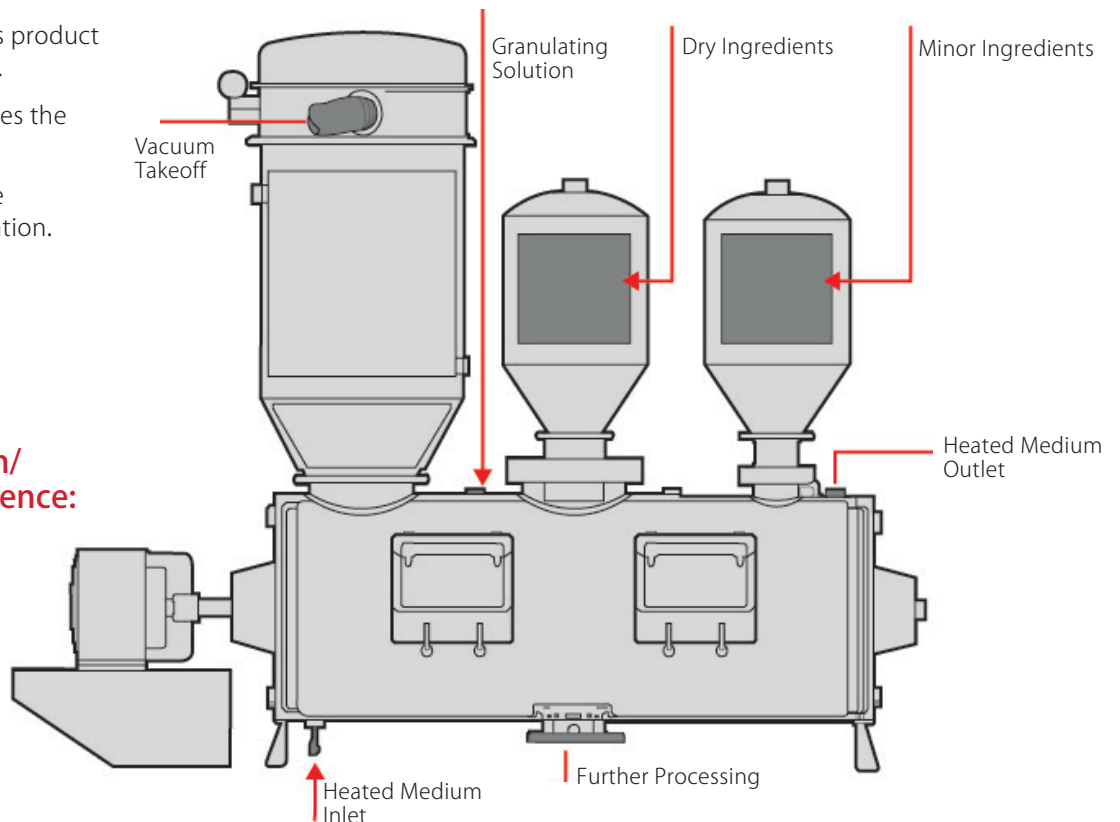

## Typical Applications

### Food:

Food products are frequently agglomerated to increase their dispersion rate in liquids. Fruit and chocolate drink mixes, for example, must “dissolve” quickly with minimal stirring.

### Pharmaceutical:

Pharmaceutical granulation produces the material handling characteristics and absolute uniformity of die-fill needed to assure rigid dosage accuracy on high-speed tableting presses.


### Chemical:

In the chemical industry, agglomeration controls dusting of such materials as fly ash, fertilizer, and other hazardous powders.

### Ceramics & Powdered Metal:

Powdered metal and ceramics processors granulate to prevent component segregation, improve material flow, and adjust density to modify die compression ratio.

## Typical Agglomeration Wet Granulation Curve

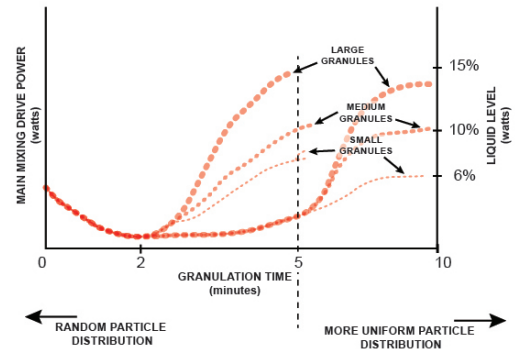

In Processall’s Mixmill® line of mixing granulators, medium density blending elements lift and disperse the product to produce a mechanically fluidized bed. This rapidly and efficiently blends materials of widely different density and particle size. Meanwhile an integral, high-intensity chopping mill system distributes the agglomerating solutions while binding and controlling particle size. Post milling is usually unnecessary.

The high efficiency of the chopping mills often permits using less granulating solution and eliminates the need for subsequent drying. When post-drying is necessary, a Processall Mixmill® equipped with a heated jacket takes advantage of the excellent heat transfer rates of the fluidized bed systems to rapidly and efficiently dry the agglomerated product. Processall can provide a complete vacuum drying system with a solvent recovery/reuse capability.

Vacuum drying after pharmaceutical granulation in a Processall Mixmill® improves particle size distribution reproducibility. Processall maintains a well-equipped testing laboratory and a rental fleet dedicated to process and development requirements.

**We offer testing, rental  
and installation services...  
Contact us for  
more information**



**Contact us today**

4600 N. Mason-Montgomery Road | Mason, OH 45004 | 513-923-5904 | sales@Processall.com

[www.Processall.com](http://www.Processall.com)

